



PLACEMENT OF CENTER FASTENER
MAY BE POSITIONED $\pm 1/4$ "
UPSLOPE/DOWNSLOPE TO CLEAR
ADJACENT FASTENER AS REQUIRED

FASTENER SEQUENCE @ ENDLAP

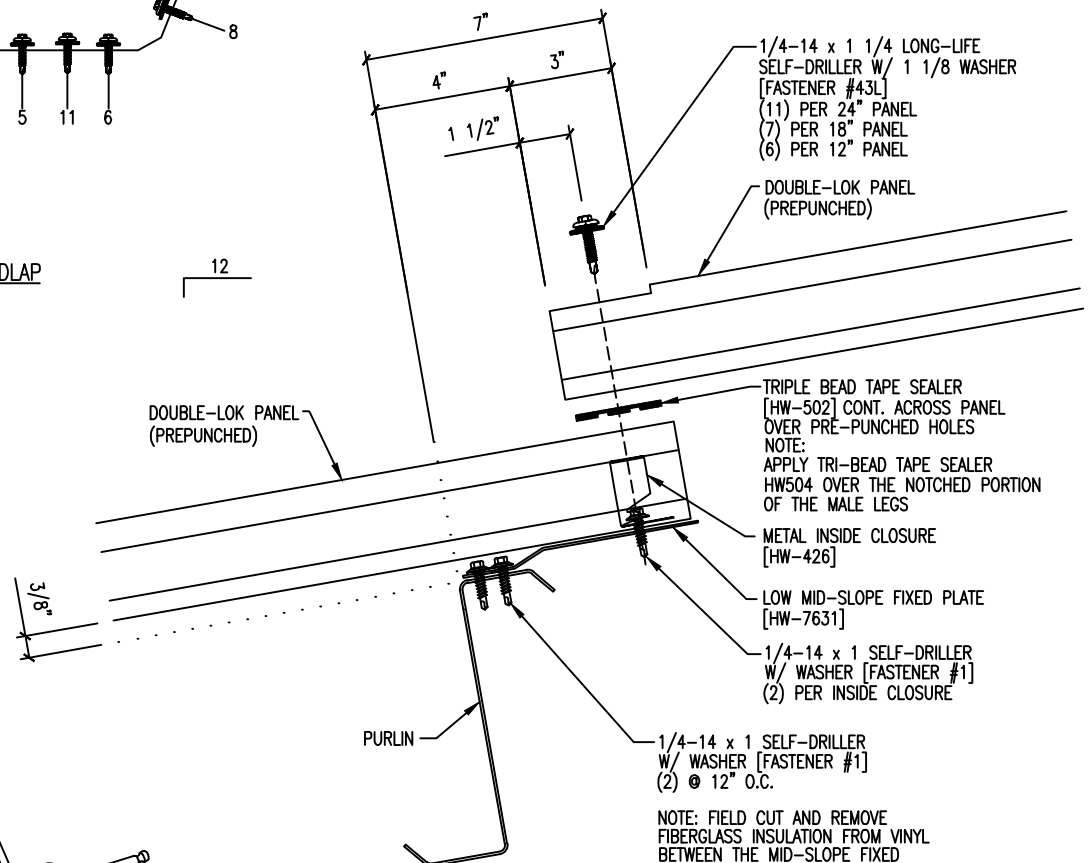

NOTE: FIELD CUT AND REMOVE
FIBERGLASS INSULATION FROM VINYL
BETWEEN THE MID-SLOPE FIXED
PLATE AND TOP OF PURLIN.
ADDITIONAL BLANKET INSULATION OR
FOAM IN PLACE INSULATION
(NOT BY MBCI) MAY BE REQUIRED AT
MID-SLOPE PURLIN LOCATION TO
PREVENT CONDENSATION DEPENDENT
ON BUILDING EXTERIOR/INTERIOR
CLIMATE OR BUILDING ENVELOPE
INSULATION METHOD INSTALLED.

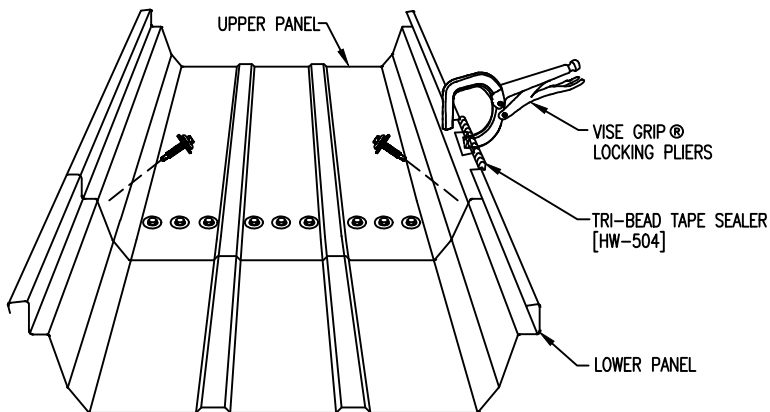

PANEL INSTALLATION SEQUENCE