



PLACEMENT OF CENTER FASTENER  
MAY BE POSITIONED  $\pm 1/4"$   
UPSLOPE/DOWNSLOPE TO CLEAR  
ADJACENT FASTENER AS REQUIRED

FASTENER SEQUENCE @ ENDLAP

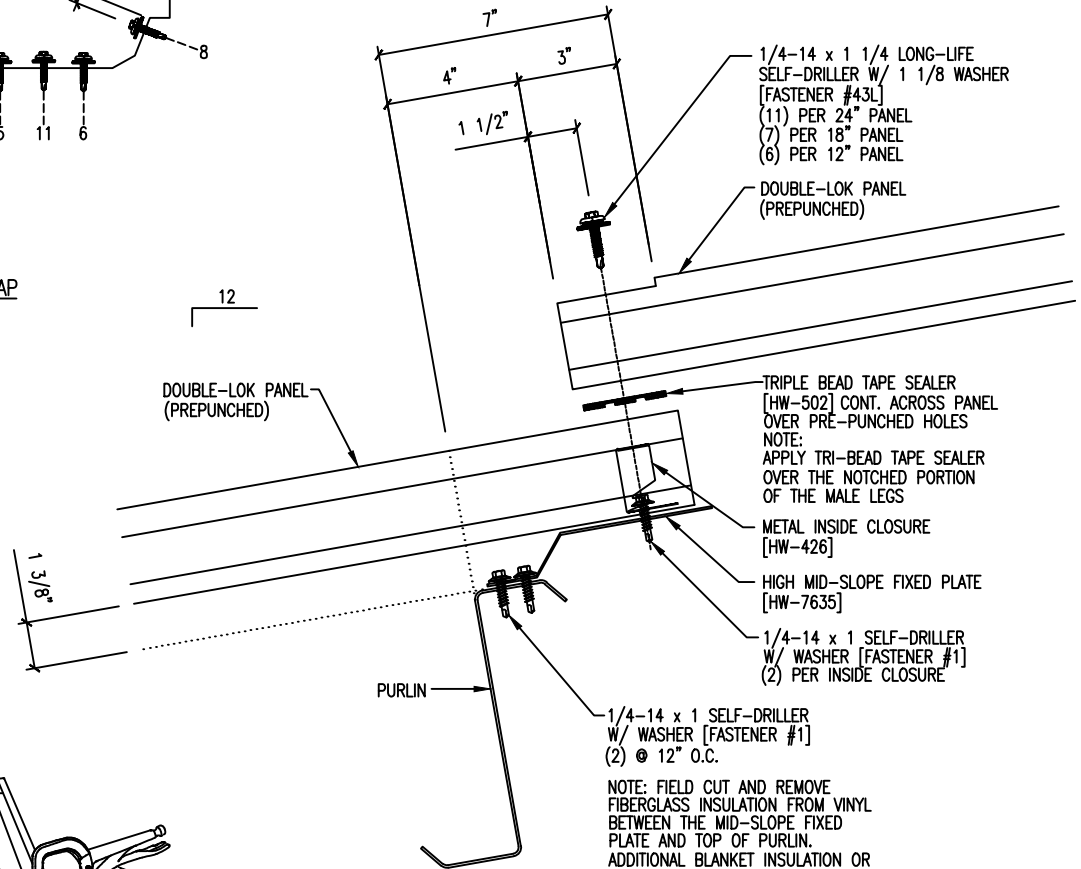

NOTE: FIELD CUT AND REMOVE  
FIBERGLASS INSULATION FROM VINYL  
BETWEEN THE MID-SLOPE FIXED  
PLATE AND TOP OF PURLIN.  
ADDITIONAL BLANKET INSULATION OR  
FOAM IN PLACE INSULATION  
(NOT BY MBCI) MAY BE REQUIRED AT  
MID-SLOPE PURLIN LOCATION TO  
PREVENT CONDENSATION DEPENDENT  
ON BUILDING EXTERIOR/INTERIOR  
CLIMATE OR BUILDING ENVELOPE  
INSULATION METHOD INSTALLED.

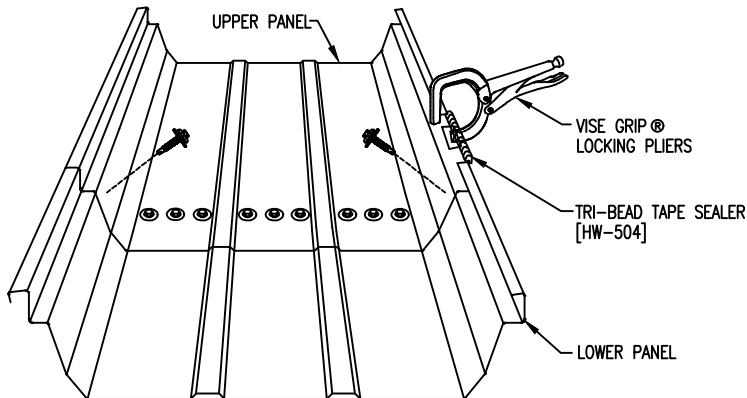

PANEL INSTALLATION SEQUENCE