


# CFR Insulated Roof Panel Endlap


Page  
MBCFR010

Date  
Jun '16


Rev  
00

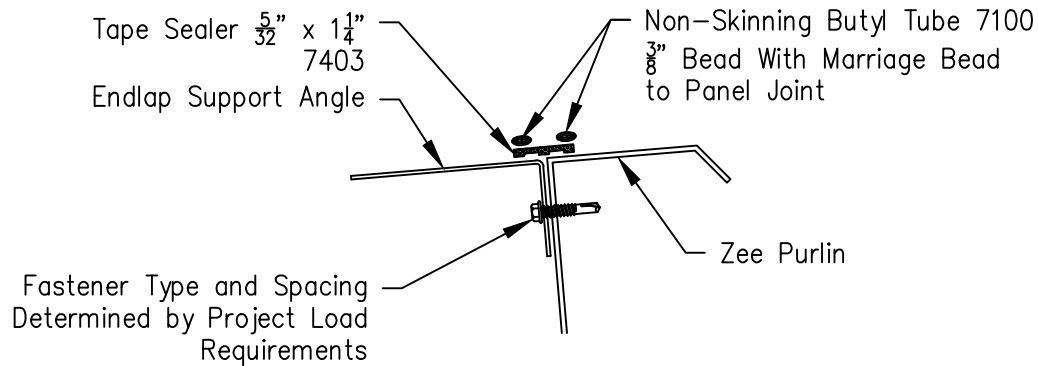

Step 1

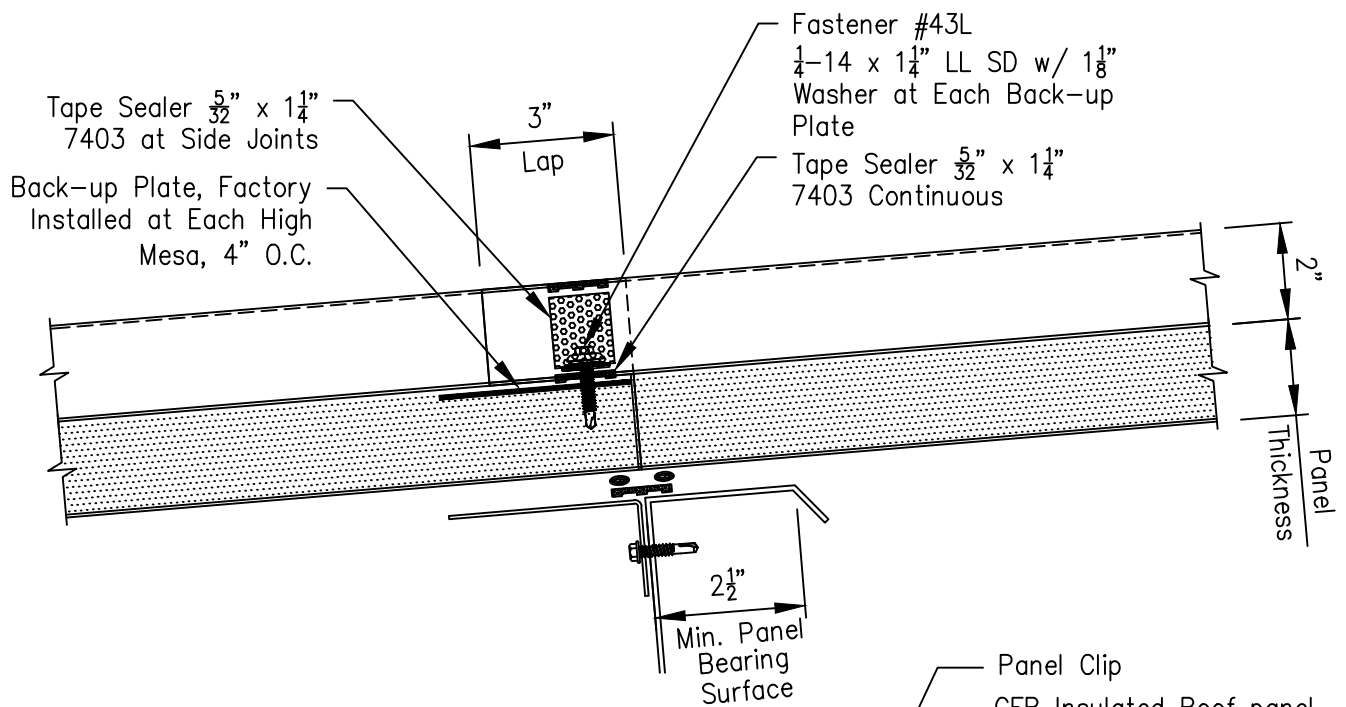

Step 2

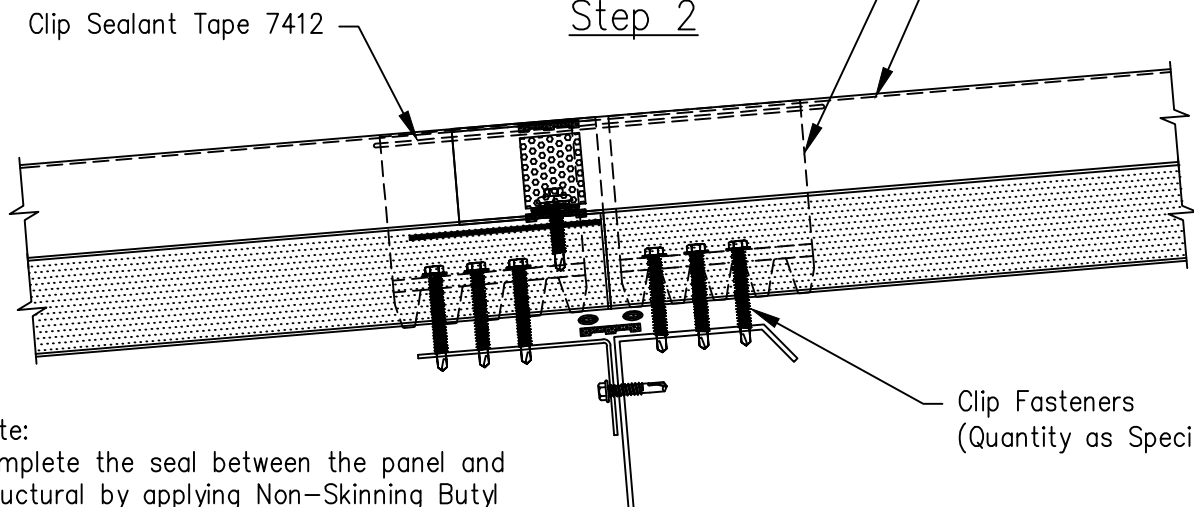

Note:  
Complete the seal between the panel and structural by applying Non-Skinning Butyl Tube 7100 from the panel groove to the sealant on the purlin or endlap support angle.

Step 3