



PLACEMENT OF CENTER FASTENER MAY BE POSITIONED  $\pm 1/4"$  UPSLOPE/DOWNSLOPE TO CLEAR ADJACENT FASTENER AS REQUIRED

FASTENER SEQUENCE @ ENDLAP

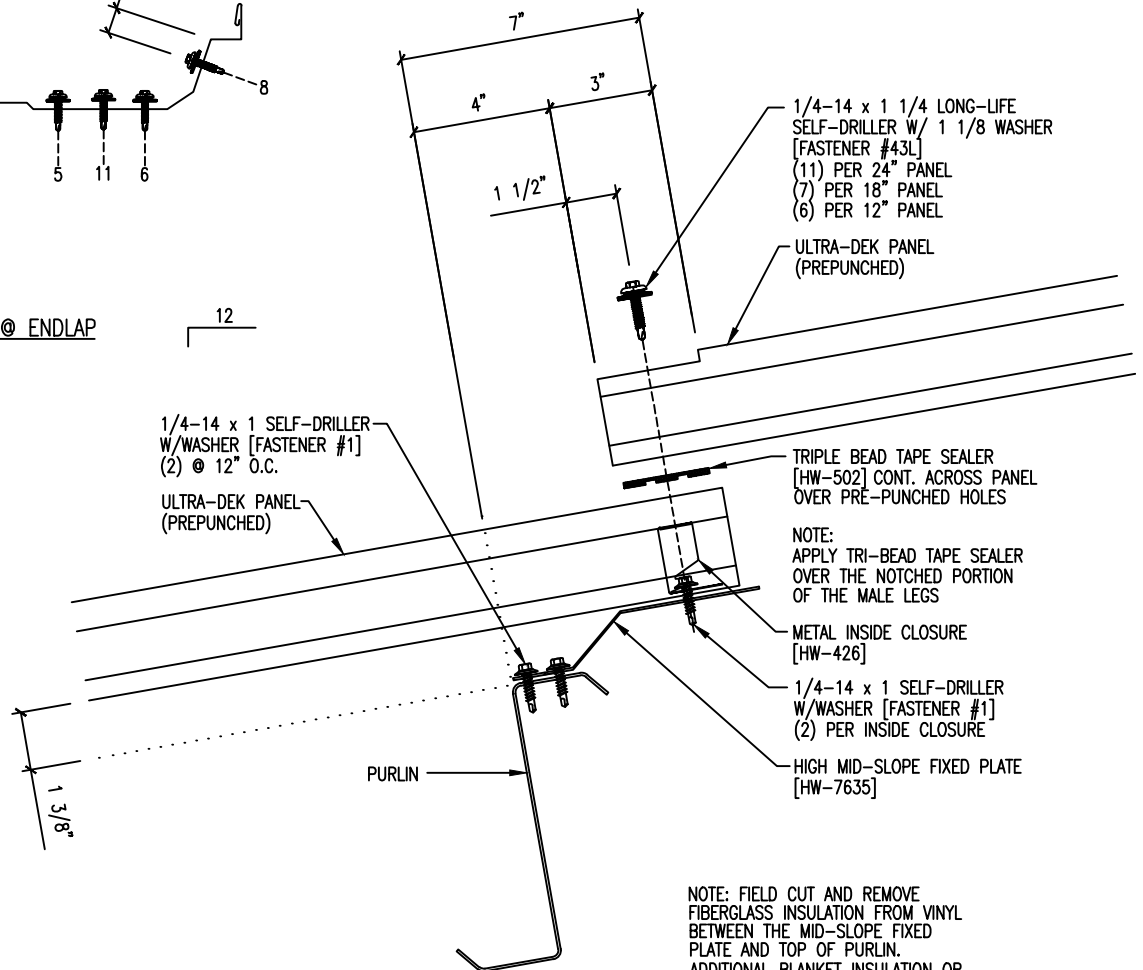

NOTE: FIELD CUT AND REMOVE FIBERGLASS INSULATION FROM VINYL BETWEEN THE MID-SLOPE FIXED PLATE AND TOP OF PURLIN. ADDITIONAL BLANKET INSULATION OR FOAM IN PLACE INSULATION (NOT BY MBI) MAY BE REQUIRED AT MID-SLOPE PURLIN LOCATION TO PREVENT CONDENSATION DEPENDENT ON BUILDING EXTERIOR/INTERIOR CLIMATE OR BUILDING ENVELOPE INSULATION METHOD INSTALLED.

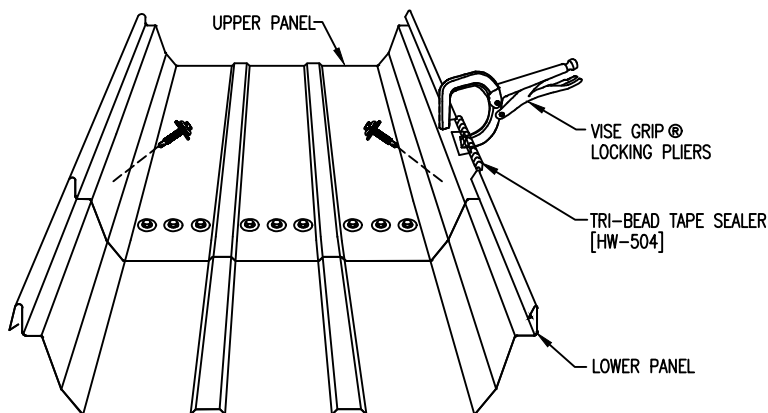

PANEL INSTALLATION SEQUENCE